



LIGHT LIVESTOCK EQUIPMENT & SUPPLY

LightLivestockEquipment.com

(866) 999-2821

Grinder JR Safety Precautions

The grinder should be operated on a dedicated 15 ampere, 110 volt circuit. If the circuit does not have 15 free amps available, a larger circuit must be used. All extension cords must be 12 gauge with a maximum length of 25 ft. The circuit fuse type must be a time delay. Low voltage could cause damage to the motor.

Power cord should be free of any moving parts, twisting or crimping while in use and while in storage.

Grinder **MUST** be securely clamped to a fixed, stable surface before and during operation. Clamps must not touch motor, arbor or disc. Allow grinder to come to a complete stop and unplug power cord before unclamping.

Unplug grinder and allow disc to come to a complete stop before loosening disc nut. Disc nut must be securely tightened before start up.

There are surfaces on the grinder that while in operation and thereafter can cause serious burns if touched. Allow equipment time to cool before any maintenance is attempted.

Tighten pendulum wingnuts securely after pendulum hanger installation.

Pendulum hanger is pre-set for correct grinding of combs and cutters. If adjustments are made to pendulum hanger, tighten all nuts securely before use.

Always wear safety goggles or a full face shield when operating grinder.

Do not expose to rain or use in damp conditions.

Lubricate bearings after every 5 hours of use with a premium bearing grease.