



LIGHT LIVESTOCK EQUIPMENT & SUPPLY

LightLivestockEquipment.com

(866) 999-2821

Grinder XL Safety Precautions

The grinder should be operated on a dedicated 15 ampere, 110 volt circuit. If the circuit does not have 15 free amps available, a larger circuit must be used. All extension cords used must be 12 gauge with a maximum length of 25 ft. The circuit fuse type must be a time delay. Low voltage could cause damage to the motor.

While the grinder is in operation, all guards and covers should be attached or installed correctly. Do not operate the equipment if any guard or cover is damaged or missing. Power cord should be free of any moving parts, twisting or crimping while in use and while in storage.

There are surfaces on the grinder that while in operation and thereafter can cause serious burns if touched. The equipment should be allowed time to cool before any maintenance is attempted.

Unplug grinder and allow discs to come to a complete stop before loosening disc nuts. Disc nuts must be securely tightened before start up.

Pendulum hanger is pre set for correct grinding of combs and cutters. If adjustments are made to pendulum hanger, tighten all nuts securely.

Tighten wing nuts securely after pendulum hanger installation.

Operation of grinder should always be in a position that is stable. Never use in an elevated position that could allow the unit to fall or be tipped over.

Always wear safety goggles or a full face shield when operating grinder.

Do not expose to rain or use in damp conditions.

Lubricate bearings after every 5 hours of use with a premium bearing grease.