


# LIGHT LIVESTOCK

EQUIPMENT & SUPPLY

By AuSable Valley Alpacas

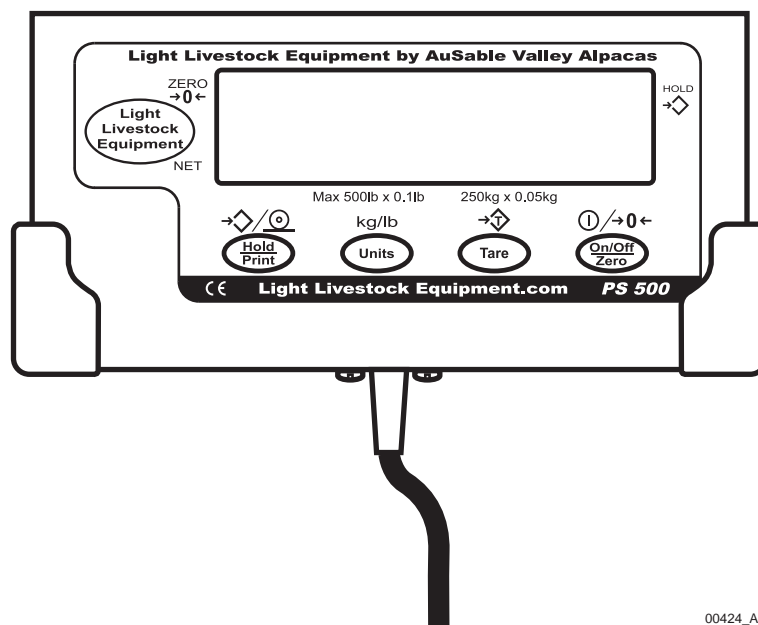

00424\_A

# PS-500 Series Scale

## *Calibration Instructions*

## Contents

Calibrating the scale .....	3
-----------------------------	---

## Calibrating the scale

---

**NOTE:**

To calibrate the PS-500 scale you need to use a weight that is a minimum of 25% of the scale's capacity.

**NOTE:**

To stop or cancel the manual calibration procedure at any time, press the **On/Off/Zero** key.

To calibrate the PS-500 scale complete the steps below:

1. Press the **On/Off/Zero** key to turn on the indicator.

The indicator goes through a display test. When the indicator is stable, it is ready for you to calibrate the scale.

2. Make sure that there is no weight on the scale.
3. Press and hold the **Tare** key and the **On/Off/Zero** key at the same time.
4. When the indicator shows **CAL.-?** release the **Tare** key and the **On/Off/Zero** key.
5. Press the **Tare** key.

The display shows the maximum capacity of the scale, follow by **CAL.P0** and then **0.0** (with the last **0** digit flashing).

6. Press the **Tare** key.

The display flashes and shows **CAP.P1**

7. Enter a minimum calibration weight of 125 lbs or enter the value of the calibration weight that you intend to use.

**NOTE:**

You need a minimum of 25% of the scale's capacity to calibrate the scale.

8. Put the calibration weight on the scale.
9. Enter your calibration weight from right to left until the last digit on the left is flashing.

**NOTE:**

You can press the **Unit** key to scroll up or down through the digits and you can press the **Hold/Print** key to move to the left to enter your next digit.

10. Press the **Tare** key.

The display flashes and displays **CAP.P2** with the calibration weight still on the scale

11. Enter your calibration weight again from right to left using the same procedure in steps 6 thru 9.

12. Press the **Tare** key.

13. The display flashes and displays **CAP.P0**

14. Remove the calibration weight from the scale.

15. Press the **Tare** key.


16. The display flashes **0.0** and goes back to the weigh mode.

Your scale is now calibrated and it should weigh correctly.

17. If the indicator displays a **CAL.Er** error message, repeat the above calibration procedure. If, for some reason, this does not work with your scale please call Light Livestock Equipment.

**© AuSable Valley Alpacas 2009. All rights reserved.**

No part of this publication may be reproduced, stored in an electronic retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise without the prior written consent of the copyright owner, or as permitted by law or under licence. Full acknowledgment of the source must be given. This publication was correct at the time of going to print. However, AuSable Valley Alpacas reserves the right to alter without notice the specification, design, price or conditions of supply of any product or service at any time.

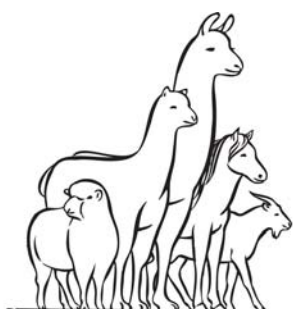

**LIGHT LIVESTOCK**  
EQUIPMENT & SUPPLY

**AuSable Valley Alpacas**  
57 Howard Heights Ln  
Jay, NY 12941  
Toll Free: (866) 999-AVA1(2821)  
Cell: (518) 524-0545  
email: [info@ausablevalleyalpacas.com](mailto:info@ausablevalleyalpacas.com)  
www: [ausablevalleyalpacas.com](http://ausablevalleyalpacas.com)