


ASSEMBLY INSTRUCTIONS FOR #1035 & #1036 SKIRTING TABLES

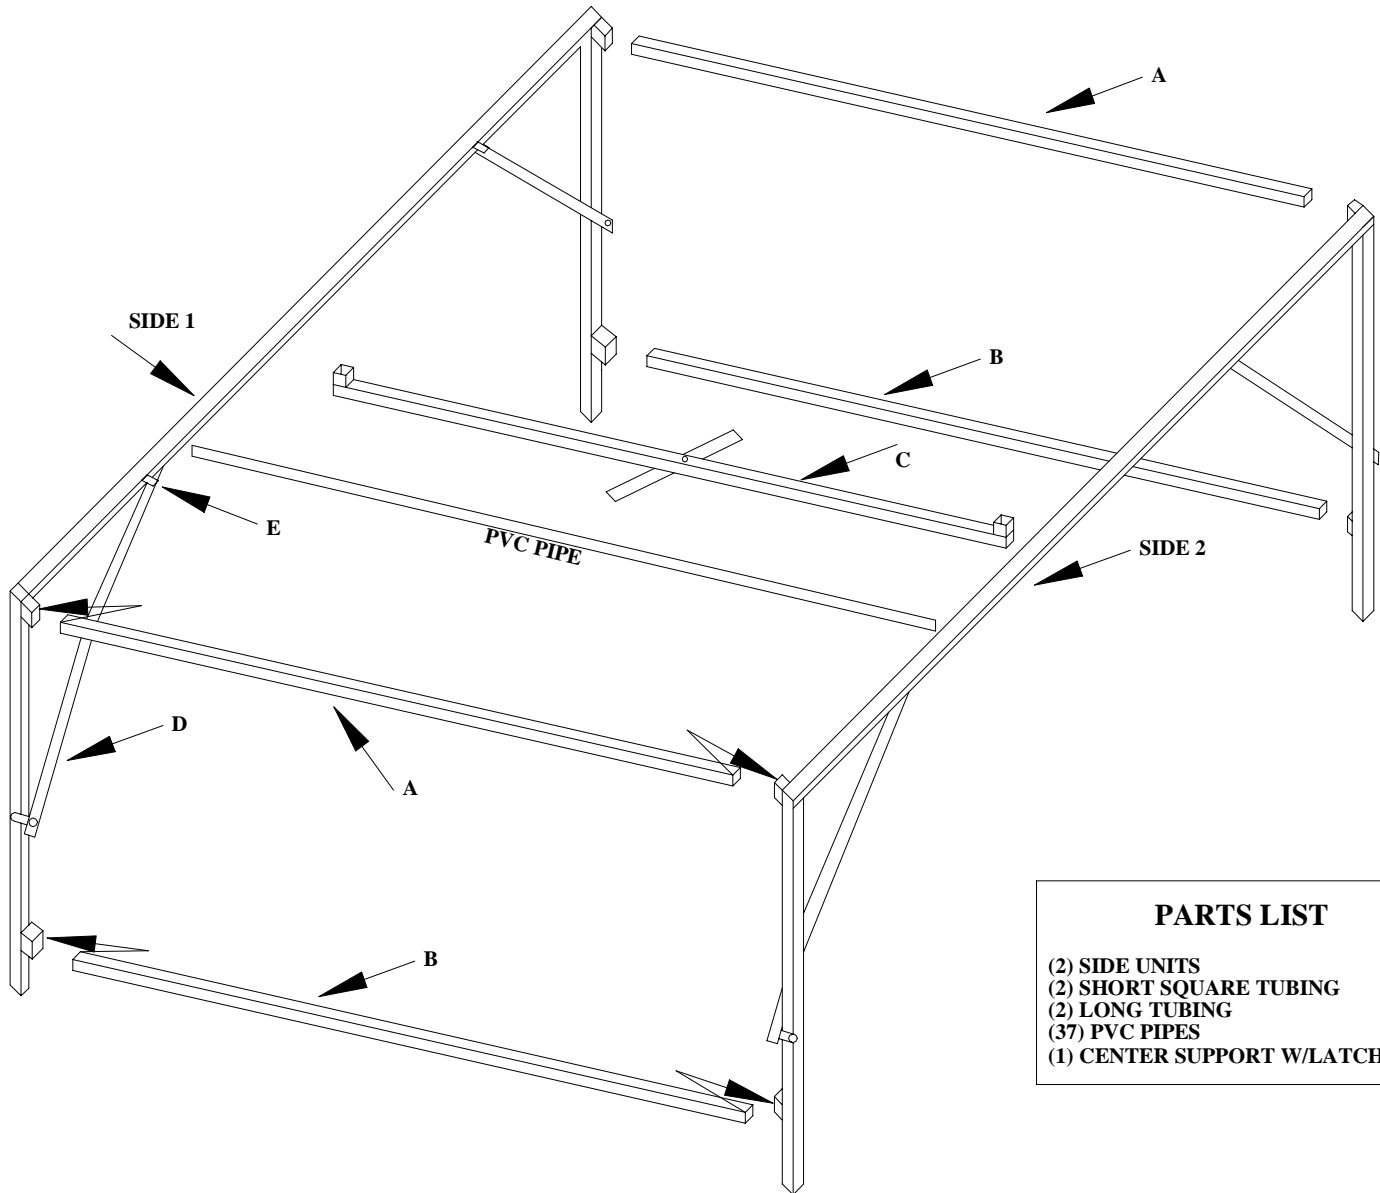

PARTS LIST

- (2) SIDE UNITS
- (2) SHORT SQUARE TUBING
- (2) LONG TUBING
- (37) PVC PIPES
- (1) CENTER SUPPORT W/LATCH

STEP #1

UNFOLD LEGS ON SIDE 1 AND REMOVE HAIR PINS FROM (E) THEN PLACE BRACE BAR (D) OVER (E) AND SECURE WITH HAIR PIN.

NOTE: REPEAT FOR SIDE 2

STEP #2

INSERT SQUARE TUBING (A) IN SLEEVE ALL THE WAY AND SECURE SET BOLTS.

NOTE: (A) IS 1" SHORTER THEN (B)

STEP #3

INSERT SQUARE TUBING (B) IN SLEEVE ALL THE WAY AND SECURE SET BOLTS.

STEP #4

INSERT MIDDLE SUPPORT (C) INTO SLEEVE ALL THE WAY AND SECURE SET BOLTS.

STEP #5

INSERT PVC PIPE OVER ONE OF THE WELDED NUTS, BOW IT UP AND INSERT PIPE INTO OPPOSITE NUT.

NOTE: REPEAT TILL ALL PIPES ARE IN PLACE.

